



Bottle Bag Pattern



By Aimee Larsen for HomeSpun-Threads

Materials:


- 1/3 Yard of Exterior Fabric
- 1/3 Yard of Interior Fabric
- 1/3 Yard of Heavy Fusible Interfacing

Cut and Iron:

- Cut 2: Exterior 8.5" Wide x 11" Tall
- Cut 2: Interior 8.5" Wide x 11" Tall
- Cut 1: Strap 4" Wide x 12" Long
- Cut 4: Interfacing 8.5" Wide x 11" Tall
- Cut 1: Interfacing 2" Wide x 12" Long
- Iron Interfacing to wrong side of all bag pieces.
- Iron 2" interfacing down center of strap, fold sides in, press and fold in half and press, lining up the clean edge.

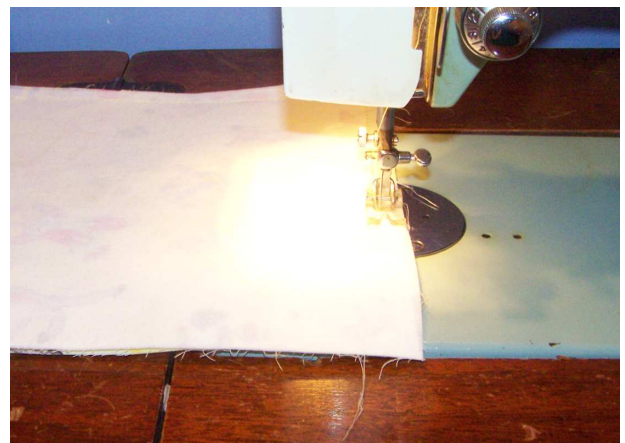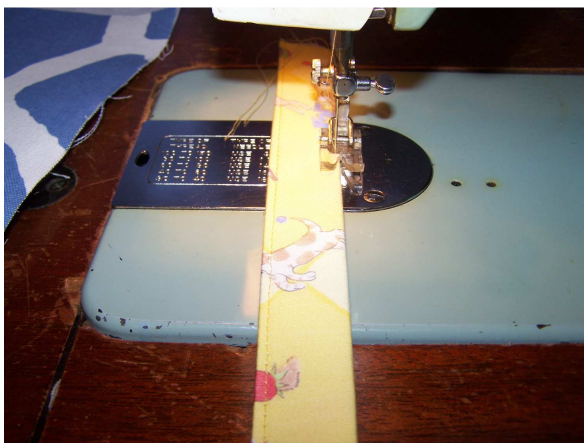

1. Sew strap down both sides. Lay exterior bag pieces right sides together and sew down, along bottom and up. Do the same for the inside bag pieces.

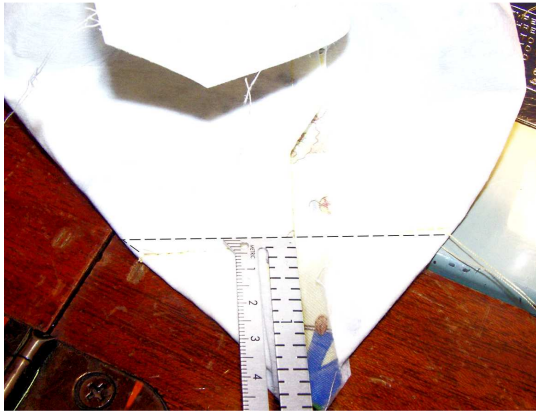

2. Fold the corner edges out and sew 2 inches from the corner as shown. Your bag will look like the one above right when you have finished the corners. You can trim off the excess or fold them in. Do this for both exterior or interior bags.

3. Fold the exterior bag down 1" along the top and iron down.



4. Tuck interior bag down inside exterior bag, lining up seams.

5. Insert strap at the seams and pin.

6. (Optional) Insert a ribbon in the center of the bag to on both sides for a tie.

7. Sew around the top of the bag and you are done!

